



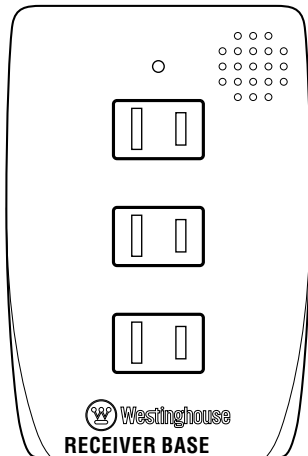

# HOLIDAY LIGHT & MUSIC SHOW WITH REMOTE

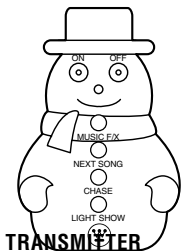

MODEL # 28080

**▲ WARNING:**

CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

**NOTE:** THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS NEEDED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

**▲ CAUTION:**

DO NOT SPLICE, REPAIR, OR MODIFY. UNPLUG WHEN NOT IN USE. FULLY INSERT PLUG. DO NOT USE DAMAGED REMOTE SETS. INSPECT PERIODICALLY. USE WITHIN THE ELECTRICAL RATING MARKED ON THE REMOTE SET. DO NOT PLUG IN MORE THAN A TOTAL OF 750 WATTS IN THIS REMOTE SET OR 250W INTO ANY SINGLE OUTLET. IF WATTS ARE NOT MARKED ON APPLIANCE, MULTIPLY AMPERE RATING BY 125 TO DETERMINE EQUIVALENT WATTS. ADD DETERMINED WATTS FOR EACH PLUGGED-IN APPLIANCE OR LAMP (SUM OF WATTS ON BULBS) TO FIND TOTAL WATTS BEING USED.

- ONLY USE THE BATTERIES SPECIFIED AND BE SURE TO MATCH THE + AND - POLARITY MARKINGS.
- REMOVE EXHAUSTED OR DEAD BATTERIES FROM THE PRODUCT.
- REMOVE BATTERIES IF PRODUCT IS NOT TO BE USED FOR A LONG TIME.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK. AS WITH ALL SMALL ITEMS, THESE BATTERIES SHOULD BE KEPT AWAY FROM CHILDREN. IF SWALLOWED, SEEK MEDICAL ATTENTION IMMEDIATELY.

THIS ITEM IS A RADIO FREQUENCY DEVICE (RF), AND AS SUCH THE RANGE OF THE REMOTE CONTROL IS DEPENDENT ON MANY FACTORS. ACTUAL OPERATIONAL DISTANCE WILL VARY BASED ON WALLS AND LINE OF SIGHT OBSTRUCTIONS, AND OTHER NEARBY ELECTRONIC DEVICES.

## INSTRUCTIONS

1. Insert the receiver base's 3-prong plug into a grounded outlet.
2. Plug light sets into the 3 outlets on the receiver base. Do not plug more than 250W of lights into any one outlet of the receiver base. If watts are not marked on your light string, multiply the ampere rating by 125 to determine equivalent watts.
3. Using the snowman ornament transmitter, press the corresponding button to activate the desired light and music effects.
4. Excessive switching between effects may cause the receiver to stop responding. If this occurs, simply turn off the remote to reset its internal computer chip, wait a few moments, and then turn the unit back on.
5. Volume control is on the left side of the receiver base.

## FEATURES EXPLAINED

<b>MUSIC F/X</b>	Attached light sets strobe to the music
<b>NEXT SONG</b>	Skip ahead to the next holiday tune
<b>CHASE</b>	3 attached light strings turn on and off in sequence to create a chasing effect
<b>LIGHT SHOW</b>	Light strings will perform multiple special effects, including fading, chasing, and flashing

## BATTERY REPLACEMENT:

The snowman ornament transmitter uses a 3V CR2032 battery, which is included. To replace the battery, slide off the battery cover on the back of the transmitter. Insert a new 3V CR2032 battery, making sure to match up to the + and - polarity markings. To test, press the ON and OFF buttons to make sure that the LED lights up. Slide the battery cover back on. Do not dispose of old batteries in fire. Batteries may explode or leak. Check with local regulations on the proper disposal of spent batteries.

## SPECIFICATIONS

3 polarized outlets and grounded plug  
Rated: 125VAC/60Hz/6A/750W Tungsten  
Each outlet 2A/250W Tungsten maximum  
Battery: CR2032 (included)  
Frequency: 315 Hz

Customer Service  
1-855-350-6868  
10AM - 6PM, EST  
Monday to Friday

**ITEM # T28080**

® and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation. Used under license by The NCC. All rights reserved.

® et WESTINGHOUSE sont des marques de Westinghouse Electric Corporation. Utilisée sous licence a The NCC. Tous droits réservés.

Manufactured and distributed by: The NCC, Brooklyn, NY 11220  
1.855.350.6868 | [www.thencc.com](http://www.thencc.com) ©2016 The NCC | MADE IN CHINA