

STANLEY®


TIMERMAX™ SELECT TRIO

Programmable 3 Outlet Remote



Customer Service
1-800-730-3707 • 10AM - 6PM, EST
Monday to Friday

Model# 28499

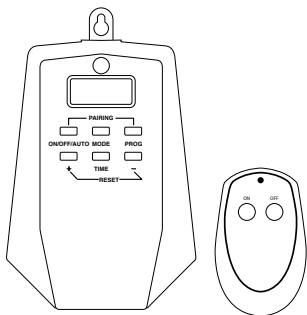

WARNING

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

INSTRUCTIONS

INITIAL USE: Before initial use, please plug in your timer for at least 1 hour to charge the internal battery. After the LCD display appears, your unit will be ready for programming.

RESET: Press the "+" and "-" buttons at the same time to reset your timer. This will clear all programmed settings.

SET CURRENT TIME

1. Press and hold the "TIME" button to enter the current time. First, set the day of the week: press "+" or "-" button to set today's day.
2. Press the "TIME" button to enter the hour setting. Press the "+" or "-" buttons to set the current hour. Be sure that AM or PM appears correctly.
3. Press the "TIME" button to enter the minute setting, Press the "+" or "-" buttons to set the current minute.

4. Press the "TIME" button to finish setting the current time and return to normal display.

SET MODE

Press & hold the "MODE" button to scroll

DISPLAY	MODE	EXPLANATION
	Digital Timer	On/off at your exact programmed times
	Photocell Countdown Timer	On at Dusk or On immediately, Off after 1-12 hours
	Digital Timer + Photocell	On at dusk, off at your exact programmed times

between the different mode settings:

SET PROGRAM

After choosing your mode, set the timer program by holding the "PROG" button for 3 seconds, and then follow the appropriate section below.

SET PROGRAM: DIGITAL TIMER

1. Set the desired day of the week setting for your timer using the "+" or "-" button to scroll between choices. You can select each day individually, Monday to Friday, Saturday/Sunday, or the entire week. To have your timer turn On/Off at the set times every day of the week, be sure to push "+" until all 7 days of the week are lit up.
2. Press "ON/OFF/AUTO" to enter the "PROG 1 ON" hour setting. Press the "+" or "-" to choose the desired hour for your timer to turn ON. Be sure to cycle through until AM or PM appears correctly.
3. Press "ON/OFF/AUTO" to enter the "PROG 1 ON" minute setting. Press the "+" or "-" to choose the desired minute for your timer to go on.
4. Press the "PROG" button to enter the "PROG 1 OFF" setting. Repeat steps 2 & 3 to set your desired Off time.

- You may now either press the "PROG" button to enter additional programs, or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and is ready for use.

SET PROGRAM: PHOTOCELL COUNTDOWN TIMER

- Set the desired day of the week program by pressing the "+" or "-" buttons. You can select each day individually, Monday to Friday, Saturday/Sunday, or an entire week. To have your timer turn ON and dusk OFF at the set time every day of the week, be sure to push "+" until all 7 days of the week are lit up.
- Press "ON/OFF/AUTO" to enter the hour setting. Press the "+" or "-" to set:

DISPLAY	EXPLANATION
d	Dusk to Dawn –ON at sundown, OFF at sunrise
d:01 to d:12	ON at Dusk, OFF 1 to 12 hours later
S:01 to S:12	ON immediately, OFF 1 to 12 hours later

- You may now either press the "PROG" button to enter additional programs, or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and is ready for use.

SET PROGRAM: DIGITAL TIMER + PHOTOCELL

- Set the desired day of the week program by pressing the "+" or "-" buttons. You can select each day individually, Monday to Friday, Saturday/Sunday, or an entire week. To have your timer turn ON at dusk and OFF at the set time every day of the week, be sure to push "+" until all 7 days of the week are lit up.

- Press the "ON/OFF/AUTO" button to enter the "OFF" time hour setting. Press the "+" or "-" to set. Be sure to cycle through until AM or PM appears correctly.
- Press the "ON/OFF/AUTO" button to enter the "OFF" time minute setting. Press the "+" or "-" to set.
- You may now either press the "PROG" button to enter additional programs, or press the "TIME" button (or wait 15 seconds) to store your program. Your timer will now show the current set time and be ready for use.

MANUAL ON/OFF REMOTE OVERRIDE

You can manually override your set programs and turn your devices on/off with the included wireless hand-held remote. Simply press the ON/OFF buttons on the remote for instant control. The timer will stay on or off until the next program setting.

MANUAL OVERRIDE

Press the "ON/OFF/AUTO" button to choose the timer status:

DISPLAY	EXPLANATION
ON	Continuously ON
OFF	Continuously OFF
AUTO	Timer will turn ON/OFF according to program settings

PAIRING

To pair Tri-mode timer with remote

- Press and hold "On/Off/Auto"+"PROG" Button for 3 seconds simultaneously
- "PAR" will flash continuously on the screen.
- Press "On" button with the transmitter and "PAR" will disappear.
- This Tri-mode timer is now paired with your remote

Remark: When you reset the timer, you have to pair the remote once again.

SPECIFICATIONS

3 grounded outlets and plug

6in AWG 14/3 SJTW vinyl cord

Rated: 125VAC / 60Hz

15A/1875W Resistive

8A/1000W Tungsten

THREE YEAR LIMITED WARRANTY: IF WITHIN THE FIRST YEAR FROM DATE OF PURCHASE, THIS UNIT FAILS DUE TO A DEFECT, EXCHANGE WHERE PURCHASED, OR SHIP IT PREPAID WITH PROOF OF PURCHASE TO THE NCC, 1840 MCDONALD AVENUE BROOKLYN, NY 11223. UNITS THAT FAIL TO OPERATE DURING THE SECOND OR THIRD YEAR FROM DATE OF PURCHASE MUST BE SHIPPED PREPAID WITH PROOF OF PURCHASE TO THE NCC. WE WILL REPLACE UNIT. THIS GUARANTEE EXCLUDES NORMAL WEAR AND TEAR AND DAMAGE RESULTING FROM ACCIDENT, ALTERATION, OR MISUSE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. FOR WARRANTY REPLACEMENT UNIT MUST BE PURCHASED FROM AN AUTHORIZED RETAILER.

Stanley and the Stanley logo are registered trademarks of Stanley Black & Decker, Inc., or one of its affiliates, and are used under license.

©2017 Stanley Black & Decker, Inc.

Manufactured and distributed by:

The NCC, Brooklyn, NY

112231.800.730.3707

www.stanleyacpower.com

MADE IN CHINA

Article# 56459 / 58459-AHR