Westinghouse C7 Replacement Cord Six Bulb, 12ft (3.7m) 20/2 Indoor Cord

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- For temporary (90 days max) installation and use only.
- · For indoor use only and in a dry location.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- · Do not let lamps rest on the supply cord or any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- · For adult use only
- This is an electric product not a toy! To avoid risk of fire, burns, personal injury, and electrical shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other)
 as a feature to reduce the risk of electrical shock. This plug will fit
 in a polarized outlet only one way. If the plug does not fit fully in
 the outlet, reverse the plug. If it still does not fit, contact a qualified
 electrician. Do not attempt to defeat this safety feature.
- This product employs overload protection (fuse). A blown fuse
 indicates an overload or short-circuit situation. If the fuse blows,
 unplug the product from the outlet. Also unplug any additional
 strings or products that may be attached to the product. Replace the
 fuse as per the user servicing instructions (follow product marking
 for proper fuse rating) and check the product. If the replacement fuse
 blows again a short circuit may be present and the product should be
 discarded.
- Read and follow all instructions that are on the product or provided with the product
- Do not use with extension cords.

FOR INDOOR USE ONLY

SAVE THESE INSTRUCTIONS!

Customer Service Assistance: Toll Free 1-855-350-6868 Hours of Operation: 10AM to 6PM, EST, Monday - Friday

SAVE THESE INSTRUCTIONS

When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.

- If the product is being placed on a tree, the tree should be wellsecured and stable.
- Before using or reusing, inspect product carefully. Discard any
 products that have cut, damaged, or frayed wire insulation or cords;
 cracks in the lamp holders or enclosures; loose connections or
 exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connection, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

FUSE REPLACEMENT INSTRUCTIONS

When the fuse in the attachment plug opens, please check the product to remove any faults causing fuse opening. Carefully follow the following fuse replacement instructions step by step.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- 2. Slide open the fuse access cover on the attachment plug.
- 3. Remove fuse carefully.
- 4. Risk of fire. Replace fuse only with a 5 amp, 120V fuse.
- 5. Slide closed the fuse access cover on the attachment plug.
- 6. Risk of fire. Do not replace attachment plug. It contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

THREE YEAR LIMITED WARRANTY:

If within the first year from date of purchase, this unit fails due to a defect, exchange where purchased, or ship it prepaid with proof of purchase to The NCC, 140 58th Street, P.O. Box 67, Brooklyn, New York 11220. Units that fail to operate during the second or third year from date of purchase must be shipped prepaid with proof of purchase to The NCC. We will replace unit. This guarantee excludes normal wear and tear and damage resulting from accident, alteration, or misuse. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CAUTION

Replace only with same type 7 Watt Max. Candelabra-base UL Classified lamps.

To reduce the risk of fire do not deliberately reposition either lamp holder contact.

RISK OF FIRE

Plug only in exposed wall outlets where light is ventilated and cannot contact bed covering or other material that might present a fire hazard.